


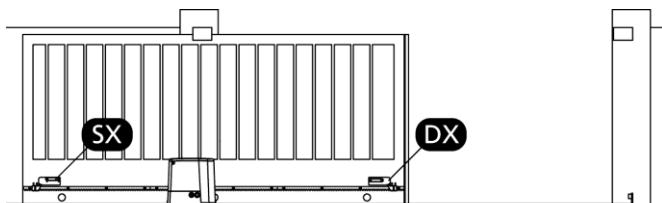
Alfariss Easy Instructions




- 1 - The first step is to wire your safety beams (sensors) if you are using them. The power for them is taken from E1 (+) and E2 (-), and the contact is J4 (Com) and J6 (Photo2). If you are not using safety beams (sensors) then put a piece of wire between J4 (Com) and J6 (Photo2).

- 2 -  These are the magnets that tell the gate when to stop. The red magnet always goes on the left (SX), and the blue one always goes on the right (DX).

- 3 - Now to setup the motor so it knows what side of the driveway the motor is on.



SX motor position

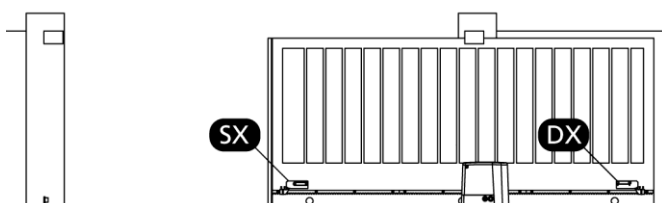

DX motor position

Alfariss Easy Instructions

- 4 - So to set the motor position in the control board press and hold the “OK” button until you see then release the button.



- 5 - The screen is now



- 6 - Now press “OK”.
right hand side of
hand side of the
the left-hand side
screen will show -



This is the setting for a motor on the the driveway. If your motor is on right driveway press “OK”, if your motor is on of the press the “↑” button and the



- 7 - So select which side you want then press “OK”, the screen will now show



- 8 - Press the “↑” button and the screen will show



- 9 - Press “Ok” to show



- 10 - Press “↑” to show



then press “OK”

Now the direction has been set. Next is to do the Auto Set

Alfariss Easy Instructions

Auto Set Instructions:

- 1 - Press and hold down the “OK” button until you see



- 2 - Release the button and the screen will show




- 3 - Press the “↑” button until you see



- 4 - Press “OK” and the gate will begin to go through the learn process, the gate will close and open a couple of times to learn the settings. When the gate has stopped moving it has learnt the Auto Set parameters. The motor is now all set 😊

Programming the remotes:

In the kit, will be a plug-in receiver and a couple of 2 button remotes.

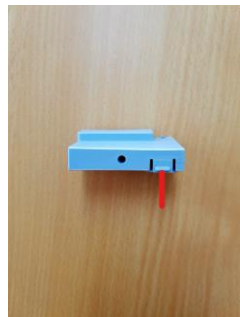

- 1 - Plug this receiver into the control board. The photo above shows you where the button is on the receiver. Press this button 1 time and the little light on the receiver will begin to blink on-off-on-off.
- 2 - Now on your remote press the button 2 times that you want to make the gate go.

Done 😊

Alfariss Easy Instructions

Setting up the auto close feature:

- 1 - Press and hold down the “OK” button until you see



- 2 - Release the button and you will see



- 3 - Press the “↓” button until you see



- 4 - Now press “OK” and you will see



- 5 - Press the “↑” to get the time that you want the gates to stay open for before the gate closes by itself. So, for 20 seconds the setting will be



- 6 - To save this setting press “OK” then press the “↑” button until you see



- 7 - Then press “OK” to see



- 8 - Press “↑” button to see



then press “OK” Done 😊